Yocto: Poky 2.5, BSP: NXP Sumo BSP L4.14.98-2.0.0_ga, Linux: Freescale imx_4.14.98-2.0.0_ga
Variscite Yocto Sumo i.MX8QM Release V1.7
12/16/2019
VAR-SOM-MX8/SPEAR-MX8
v1.1 and higher
v1.1 and higher
https://github.com/varigit/meta-variscite-imx
sumo-imx-4.14.98-var01
16c885cb0c05d46edee2333d21ff506a5c3dd5a2
https://github.com/varigit/linux-imx
imx_4.14.98_2.0.0_ga_var01
f46b4b86d886f281c13ec9e2d304c6af7ca69fa0
https://github.com/varigit/uboot-imx
imx_v2018.03_4.14.98_2.0.0_ga_var01
a14aa90952a405a7c34e9ec6947a42c30c1effd5
Yocto Sumo
var-som-mx8-recovery-sd.v17.img.gz
Description
Required to support latest CPU and PMIC revisions
Fixes capacitive touch on Symphony board v1.2, backwards compatible with older Symphony revisions
HDMI and DP displays are now supported via Variscite extension modules
Updated to latest NXP ATF release that fixes Cortex A72 cache configuration
Fixes U-Boot hang on reboot when HDMI or DP displays are connected
Do not stop Variscite WiFi service or reboot/poweroff as this causes occasional WiFi driver crashes
The step variable with service of reboot power on as this causes occasional with a diver crashes
Bo not stop variable will receive of repost power on as this causes occasional will runver crashes
Do not stop varisoite vvii i service of repost poweron as this causes occasional vvii i driver drastics
i.MX8QM SATA support in Linux is currently not stable, disabled in DTS